



LIFETIME
KIDSROOMS



Art. 7329

image 1



image 2

 
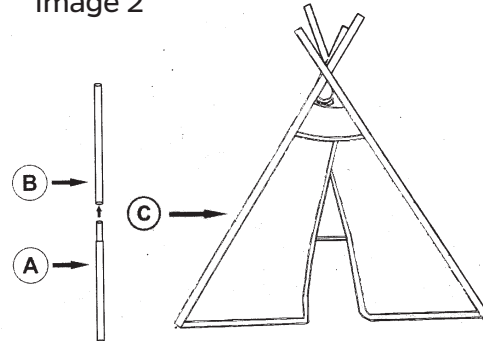 


image 3

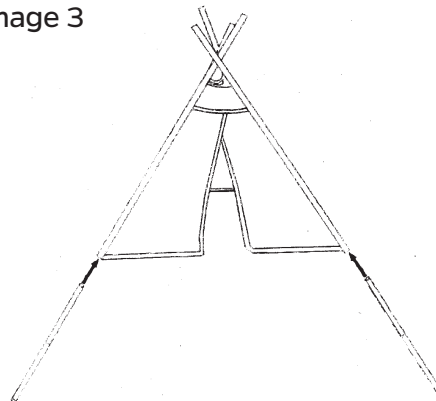

Pre-assembly;

- For your safety and ease, assembly by two adults is recommended.
- Please read all instructions before beginning assembly. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- Remove all parts and hardware from box and lay out on a carpeted or scratch- free work surface. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts of hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included prior to starting assembly.

Parts included;

- (A) bottom pole half 4 pcs
- (B) top pole half 4 pcs
- (C) Teepee fabric 1 pc

Assembly instructions:

1. Put all parts on a carpeted or scratch- free work surface. Connect bottom pole halves (A) to top pole halves (B) as shown in image 2.
2. Slide connected poles into (4) holes as shown at bottom corners as shown in image 3. Cover bottoms of holes with attached Velcro to protect flooring.
3. Place teepee upright. Arrange poles so each pole rests on the outside of the pole to its left. Tie strap around all 4 poles to secure placement.

Assembly is now complete.

For indoor use only

Materials:

80% cotton (fabric) & 20% metal (poles)

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TEEPEE FABRIC.

Washinstructions:

30° Gentle machine wash (without poles)



CREATED FOR FUN SINCE 1972